 


# 電源供應 器配件

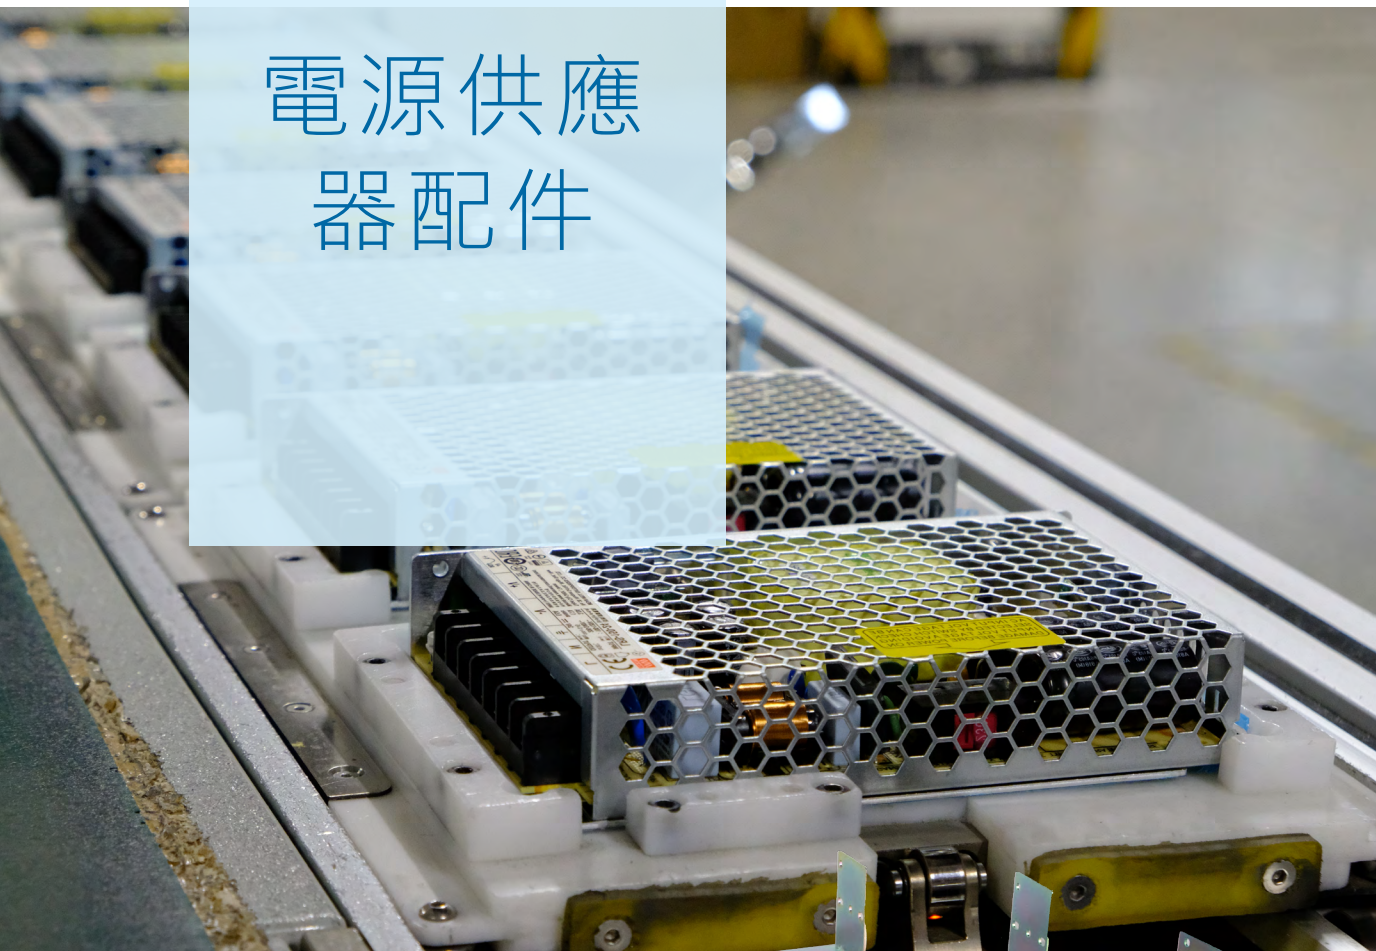

 
# 金屬固定件

品號	圖示	明緯機殼代號	適用明緯機型
<a href="#">DRL-01</a>		238, 239, 240 903, 905, 931 932, 971	LRS-35/50/75/100 RS-25 RS-35 RS-15
<a href="#">DRL-02</a>		241 901, 902, 906 915, 916, 920	LRS-150/150F SD-100/150
<a href="#">DRL-03A</a>		980 987	SP-240 HRP(G)-300
<a href="#">DRP-01</a>		238, 239, 241 901, 902 903, 906 931, 932, 946	LRS-35/50/100/150/150F All models
<a href="#">DRP-01A</a>		203, 205 978, 999	RSD-100/150/200/300
<a href="#">DRP-02</a>		240 905, 915, 916, 920, 928	LRS-75
<a href="#">DRP-03</a>		DRP-01 DRL-01~03	All models
<a href="#">DRP-04</a>		203, 205 978, 999	RSD-100/150/200/300
<a href="#">DRP-14</a>		214 979 984	EDR/NDR/SDR/TDR- 240/ 480/ 960
<a href="#">DRP-14A</a>		214 CMU2	CMU2/ SDR-960/ TDR-960
<a href="#">DRP-15</a>		221 979, 984, 992	EDR/NDR/SDR/TDR- 75/ 120


品號	圖示	明緯機殼代號	適用明緯機型
<a href="#">MHS012</a>		206, 207, 215A 912, 915, 916, 935, 939, 940 977,980, 982, 986, 987,995	HDP-190/ 240 RSP-200/ 320/ 500 LRS-200/ 350 RSP-150 SE-450/ 1000 MP450/ 650/ 1000 HRP-300/ 450/ 600 RSP-2400/ 3000
<a href="#">MHS012D</a>		287	NPB-120/240/360
<a href="#">MHS013</a>		919, 926	SP-750 SE-600
<a href="#">MHS013A</a>		250 256 296 294	RSP-1600 RPB-1600 RCP-1600 RCB-1600 DPU-3200 DRP-3200 NSP-1600 NSP-3200
<a href="#">MHS014</a>		212 952	RSP-750 RSP-1000 SD-1000
<a href="#">MHS025</a>		910	PSP-600 SP-500 PSPA-1000
<a href="#">MHS026</a>		943	RSP-1500
<a href="#">MHS027</a>		971, 931	RS12 RS25

# 安裝示意圖

## DRL/DRP系列安裝示範

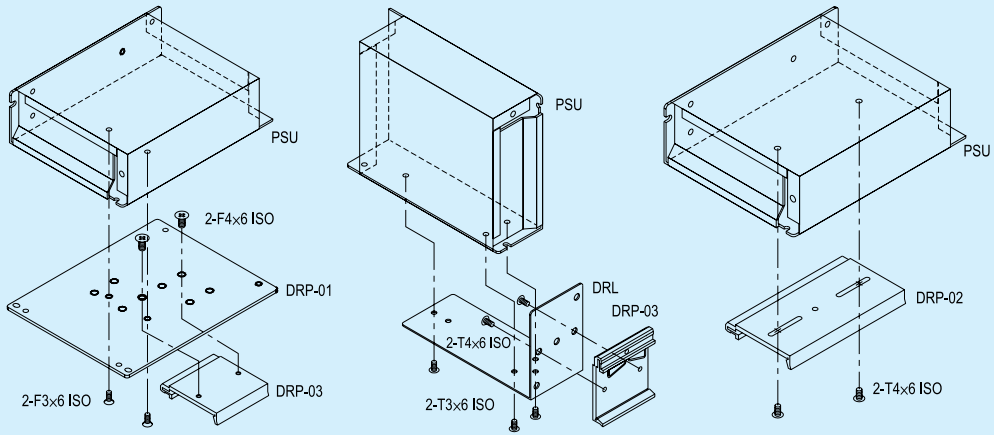

## MHS系列安裝示範

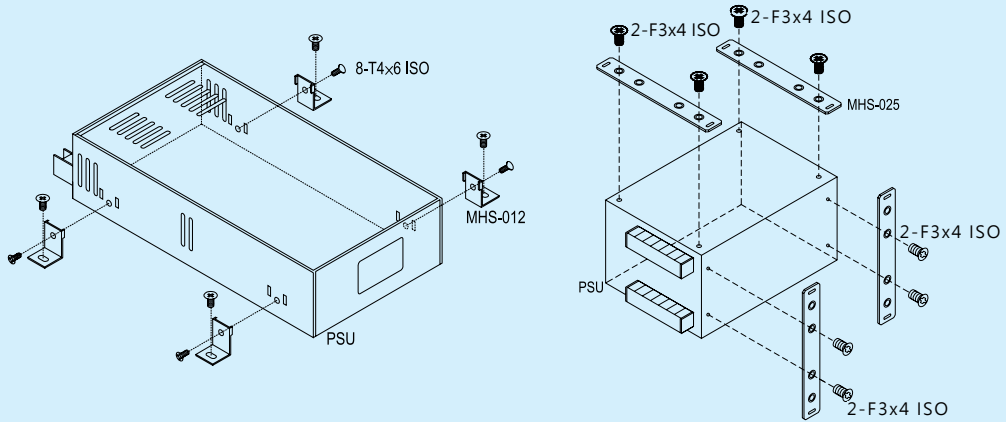 

## DRP系列安裝示範

