

註：我們正在增強系統，因此您可能發現資料缺失/過期。在這段過渡時期，請參考您的合規證明或聯絡我們的客戶服務部門 (<https://www.ul.com/about/locations>)。

Auxiliary Devices - Component

COMPANY

Switchlab Inc

8F No 66 Zhongzheng Road
Xinzhuang District
New Taipei, 24243 Taiwan

E333442

Marking: Company name or tradename "DECA" , and model designation.

Note: For additional marking information, refer to the [Guide Information Page](#).

View model for additional information

Auxiliary Devices, Model(s): [Contact Assembly, Series EA](#), followed by 01, 10, 02, 20, 11, 03, 30, 04, 40, 12, 13, 21, 22 or 31, followed by N, V or P, may be followed by additional suffixes.

Auxiliary Devices, Model(s): [E1E](#) followed by 19, followed by F or G, followed by 6, followed by 1 or 2, followed by 0, followed by B, E, EA, EM, G, K, R, RA, RM, W, Y, YA or YM, followed by F15, F16, F41 or F42, may be followed by U, may be followed one thru six alphanumeric digits.

Auxiliary Devices, Model(s): [ES2B](#), followed by D, followed by 1 or 2, followed by X, 1 or 2, followed by X, 1 or 2, may be followed by P, may be followed by Y, B, or N1, may be followed several alphanumeric digits.

Auxiliary Devices, Model(s): [ES5B or ES3B](#), followed by D, followed by 1, 1A or 2, may be followed by S, may be followed by P, may be followed by Y, B, LG, or N1, may be followed by T or U, may be followed several alphanumeric digits.

Auxiliary Devices, Model(s): [ES6B](#) followed by D, followed by 1 or 2, followed by XX, 11, 1X, X1, 2X, X2, may be followed by P, may be followed by Y, B, or N1, may be followed several alphanumeric digits.

Auxiliary Devices, Model(s): [IES2B](#), followed by D, followed by 1 or 2, followed by X, 1 or 2, followed by X, 1 or 2, may be followed by P, may be followed by Y, B, or N1, may be followed several alphanumeric digits.

Auxiliary Devices, Model(s): [Pushbutton Switches, Series EA](#) followed by 1 or 2, followed by E, followed by 19, followed by F or G, followed by 6, followed by 1 or 2, followed by XR, XRM, XE, XRA, XRH, XY, OR, KR, ORM, KRM, ORA or KRA, followed by 01, 10, 02, 20, 11, 03, 30, 04, 40, 12, 13, 21, 22 or 31, followed by N, V or P, may be followed by U, may be followed by additional suffixes.

Illuminated Pushbuttons Switches, Model(s): [ADA16S followed by 4 or 6](#) followed by A or M, followed by A, D, E, R, S, T, or V, followed by 1, 2, 3, 4, 5, 6, 7, or H, may be followed by U, may be followed 5, 6, or 7, followed by A, B, E, G, H, I, J, K, X, or T, followed by 1, 2, or 3, followed by 0, A, B, C, D, E, F, G, H, J, K, K1, L, M, N, P, Q, R, S, T or U, followed by B, G, K, O, R, W, Y, or 8, may be followed by several additional letters and/or numbers.

Illuminated Selector Switches, Model(s): [ADA16C followed by 4 or 6](#) followed by A or M, followed by A, R, or V, followed by 1, 3, 7, or H, may be followed 5, 6, or 7, followed by A, B, G, H, I, J, K, T, or X, followed by A, B, E, H, O, S, T, U, or V, followed by 0, A, B, C, D, E, F, G, H, J, K, K1, L, M, N, P, Q, R, S, T or U, followed by B, G, K, O, R, W, Y, or 8, may be followed by several additional letters and/or numbers.

Illuminated Stop Switches, Model(s): [Series AV2, followed by E, followed by L](#), followed by V, P, T, TF, TO or TS, followed by E or U, followed by two or four digit numbers, may be followed by Q0, Q1, Q2, Q3, Q4, Q5, Q6, Q7, QH, QM3, Q11, Q22 or Q12, followed by R, may be followed by G, may be followed by several additional letters and/or numbers.

Key selector switch, Model(s): [C1K](#) followed by 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 18, 20, 21, 22, 23, or 24, followed by T, S, or R, followed by 5, followed by 1 or 2, followed by 1, 2, 3, 4, 5, or 6, followed by B, G, K, O, P, R, W, or Y, followed by H, followed by 10, 11, G10, or G11, and maybe followed by additional alphanumeric suffixes

Key selector switch, Model(s): [F24K](#) maybe followed by A, followed by 1, followed by 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 18, 20, 21, 22, 23 or 24, followed by 1, followed by 3, 4, G3 or G4, followed by 0NF, followed by S, P, A or B, followed by 1, followed by N, followed by 01, 02, 03, 04, 05 or 06, maybe followed by additional alphanumeric suffixes.

Key selector switch, Model(s): F29K maybe followed by A, followed by 1, followed by 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 18, 20, 21, 22, 23 or 24, followed by 1, maybe followed by U, followed by 3, 4, G3 or G4, followed by ONF, followed by S, C, T, P, D, 0, 1 or 2, followed by N, followed by 01, 02, 03, 04, 05 or 06, maybe followed by additional alphanumeric suffixes.

Key selector switch, Model(s): F34K maybe followed by A, followed by 1, followed by 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 18, 20, 21, 22, 23 or 24, followed by 1, followed by 3, 4, G3 or G4, followed by ONF, followed by S, P, A or B, followed by 1, followed by N, followed by 01, 02, 03, 04, 05 or 06, maybe followed by additional alphanumeric suffixes.

Key Selector Switches, Model(s): ADA16K followed by 4 or 6 followed by A or M, followed by A, R, S, T, or V, followed by 0, 3, 7, or A, may be followed by 5, 6, or 7, followed by C, D, L, M, N, P, S, U, or X, followed by A, B, C, D, E, F, G, H, I, J, K, W, O, S, T, U, or V, may be followed by 2, 3, 4, 5, or 6, may be followed by several additional letters and/or numbers.

Lamp Block, Model(s): Series AV2-E00P, may be followed by several additional letters and/or numbers.

Limit switches, Model(s): SL4MC-XX, SL4V-XX, SLZC-XX, SLZ-XX

Limit switches, Model(s): SLA followed by 00 through 99, may be followed by X or 1, followed by X, may be followed by X or R, may be followed by X.

open type key switch, Model(s): AD followed by D or P, followed by 16K, followed by 4 or 6, followed by A or M, followed by A, R, S, T, or V, followed by 0,3,7, or A, followed by 1,2,3, or 4, followed by A, B, C, D, E, F, G, U, or V, followed by 2, 3, 4, 5, 6, or blank, may be followed by additional alphabet or number.

open type pilot light, Model(s): D16 followed by PL, followed by R1, R2, R3, S1, S2, T1, T2, R6, S6, T6, V1, V2, V3, V4, U1, U2, U3, or U5, followed by 000, followed by F, G, H, J, K, K1, P, X, A, B, C, D, E, L, M, N, Q, R, S, T, or U, followed by B, G, O, R, W, Y, K, 8, O or P, may be followed by additional alphabet or number.

open type pilot light, Model(s): Model D16, DH6 followed by PL, followed by R1, R2, R3, S1, S2, T1, T2, R6, S6, T6, V1, V2, V3, V4, U1, U2, U3, or U5, followed by 000, followed by F, G, H, J, K, K1, P, X, A, B, C, D, E, L, M, N, Q, R, S, T, or U, followed by B, G, O, R, W, Y, K, 8, O or P, may be followed by additional alphabet or number.

open type push button, Model(s): Model D16, DH6 or P16 followed by BA, BM, LA, or LM, followed by R1, R2, R3, S1, S2, T1, T2, R6, S6, T6, V1, V2, V3, V4, U1, U2, U3, or U5, followed by 1ab, 2ab, 3ab, or 4ab, followed by 0, F, G, H, J, K, K1, P, X, A, B, C, D, E, L, M, N, Q, R, S, T, or U, followed by B, G, O, R, W, Y, K, 8, or P, may be followed by additional alphabet or number.

open type push button, Model(s): P16 followed by BA, BM, LA, or LM, followed by R1, R2, R3, S1, S2, T1, T2, R6, S6, T6, V1, V2, V3, V4, U1, U2, U3, or U5, followed by 1ab, 2ab, 3ab, or 4ab, followed by 0, F, G, H, J, K, K1, P, X, A, B, C, D, E, L, M, N, Q, R, S, T, or U, followed by B, G, O, R, W, Y, K, 8, or P, may be followed by additional alphabet or number.

Open type Push Button and Illuminated Push Button Switch, Model(s): F12S followed by 1, followed by 1 or 2, followed by 2, followed by 1, followed by 0, 2, 3 or 4, followed by N, G, R, A, B or W, followed by F, P or D, followed by S, P, A or B, may be followed by 1, followed by 0, G, R, A or B, followed by 00, 01, 02, 03 or 04, followed by one thru ten alphanumeric digits or blank (does not affect the construction).

Open type Push Button and Illuminated Push Button Switch, Model(s): F17S followed by 1, followed by 1 or 2, followed by 2, may be followed by U, followed by 1, followed by 0, 2, 3 or 4, followed by N, G, R, A, B or W, followed by F, P or D, followed by S, P, A, B, 0, 1 or 2, followed by 0, G, R, A or B, followed by 00, 01, 02, 03 or 04, followed by one thru ten alphanumeric digits or blank (does not affect the construction).

Open type Push Button Switch, Model(s): F11S followed by 2, followed by 1, followed by 1, followed by N, followed by 0, followed by F, P or D, followed by S, P, A, or B, followed by 000, followed by one thru ten alphanumeric digits or blank (does not affect the construction).

open type selector switch, Model(s): AD followed by D or P, followed by 16C followed by 4 or 6, followed by A or M, followed by A or V, followed by 1 or 7, followed by 1,2, 3, or 4, followed by A, B, E, U, or V, followed by 0, F, G, H, J, K, K1, P, X, A, B, C, D, E, L, M, N, Q, R, S, T, or U, followed by B, G, K, R, W, Y, 8, O or P, may be followed by additional alphabet or number.

Open type, Panel Mounting And Suitable for use on a Flat Surface of a Type 4X, Push Button and Illuminated Push Button Switch, Model(s): F13S followed by 1, followed by 1 or 2, followed by 2, followed by 1, followed by 0, 2 or 3, followed by N, G, R, A, B or W, followed by F, P or D, followed by A, B, S or P, may be followed by 1, followed by 0, G, R, A or B, followed by 00, 01 or 02 or 03 or 04, followed by one thru ten alphanumeric digits or blank (does not affect the construction).

Open type, Push Button and Illuminated Push Button Switch, Model(s): F18S followed by 1, followed by 1 or 2, followed by 2, may be followed by U, followed by 1, followed by 0, 2, 3 or 4, followed by N, G, R, A, B or W, followed by F, P or D, followed by S, P, 0, 1 or 2, followed by 0, G, R, A or B, followed by 00, 01, 02, 03 or 04, followed by one thru ten alphanumeric digits or blank (does not affect the construction).

Pilot light, Model(s): F16L followed by 1 followed by N2 followed by 1 followed by 2, 3, 4 or 5, followed by G, R, A, B or W, followed by F or P followed by S, P, A or B, may be followed by 1, 2, 3, 4, 5, 6 or 7, followed by 0, G, R, A, B or W, followed by 00 or 02, may be followed by one through six alphanumeric digits.

Pilot light, Model(s): F46L followed by 1 followed by N2 followed by 1 followed by 2, 3, 4 or 5, followed by G, R, A, B or W, followed by F or P followed by S, P, A or B, may be followed by 1, 2, 3, 4, 5, 6 or 7, followed by 0, G, R, A, B or W, followed by 00, may be followed by one through six alphanumeric digits.

Pilot light, Model(s): F66L followed by 1 followed by N2 followed by 1 followed by 2, 3, 4 or 5, followed by G, R, A, B or W, followed by F or P followed by S, P, A or B, may be followed by 1, 2, 3, 4, 5, 6 or 7, followed by 0, G, R, A, B or W, followed by 00 or 02, may be followed by one through six

alphanumeric digits.

Pilot lights, Model(s): C1P followed by 01, followed by R, S or T, followed by 1 or 2, followed by 1 or 2, followed by H, J, K, 0, or 1, followed by B, G, K, O, P, R, W, or Y, followed by 0, followed by D1, and maybe followed by additional alphanumeric suffixes

Pilot lights, Model(s): F24L maybe followed by A, followed by 1, followed by N2, followed by 1, followed by 2, 3, 4 or 5, followed by G, R, A, B or W, followed by F, P or D, followed by S, P, A or B, maybe followed by 1, followed by 0, G, R, A, B or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pilot lights, Model(s): F29L maybe followed by A, followed by 1, followed by N1, maybe followed by U, followed by 1, followed by 2, 3, 4 or 5, followed by G, R, A, B or W, followed by F, P or D, followed by S, C, T, P, D, 0, 1 or 2, maybe followed by 1, followed by 0, G, R, A, B or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pilot lights, Model(s): F34L maybe followed by A, followed by 1, followed by N2, followed by 1, followed by 2, 3, 4 or 5, followed by G, R, A, B or W, followed by F, P or D, followed by S, P, A or B, maybe followed by 1, followed by 0, G, R, A, B or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): C1S followed by 01, 02, 04 or 09, followed by R, S, T, M, A, or B, followed by 1, 2, 3, 5, 6 or C, followed by 1 or 2, followed by 1, 0, H, J, or K, followed by B, G, K, O, P, R, W, or Y, followed by H, followed by 01, 02, 10, 11, G01, G02, G10, or G11, maybe followed by additional alphanumeric suffixes

Pushbutton switch, Model(s): F24S maybe followed by A, followed by 1, followed by -1 or -2, followed by 1 or 2, followed by 3, 4, G3, or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B, or W, followed by F, P, or D, followed by S, P, A, or B, may be followed by 1, followed by 0, G, R, A, B, or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): F24T maybe followed by A, followed by 1, followed by N1, followed by 3, 4 G3 or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B or W, followed by F, followed by A, followed by 1, followed by R, followed by 00, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): F25S maybe followed by A, followed by 1, followed by -1 or -2, followed by 1 or 2, followed by 3, 4, G3, or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B, or W, followed by F, P, or D, followed by S, P, A, or B, may be followed by 1, followed by 0, G, R, A, B, or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): F29S maybe followed by A, followed by 1, followed by -1 or -2, followed by 1, maybe followed by U, followed by 3, 4, G3 or G4, followed by 0, 2, 3, 4 or 5 followed by N, G, R, A, B or W, followed by F, P or D, followed by S, C, T, P, D, 0, 1 or 2, maybe followed by 1, followed by 0, G, R, A, B or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): F34S maybe followed by A, followed by 1, followed by -1 or -2, followed by 1 or 2, followed by 3, 4, G3, or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B, or W, followed by F, P, or D, followed by S, P, A, or B, may be followed by 1, followed by 0, G, R, A, B or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): F34T maybe followed by A, followed by 1, followed by N1, followed by 3, 4 G3 or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B or W, followed by F, followed by A, followed by 1, followed by R, followed by 00, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): F35S maybe followed by A, followed by 1, followed by -1 or -2, followed by 1 or 2, followed by 3, 4, G3, or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B, or W, followed by F, P, or D, followed by S, P, A, or B, may be followed by 1, followed by 0, G, R, A, B or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pushbutton switch, Model(s): F74S maybe followed by A, followed by 1, followed by -1 or -2, followed by 2, followed by 3, 4, G3 or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B or W, followed by F, P or D, followed by S, P, A or B, maybe followed by 1, 2, or 3, followed by 0, G, R, A, B or W, followed by 00, 01, 02, 03 or 04, maybe followed by additional alphanumeric suffixes.

Pushbuttons Switches, Model(s): ADA16 followed by B, followed by 4 or 6, followed by A or M, followed by A, D, R, S, T, or V, followed by 1, 2, 3, 4, 5, 6, 7, or H, may be followed by U, may be followed 5, 6, or 7, followed by C, D, L, M, N, P, S, U, or X, followed by 1, 2, or 3, followed by 0 or X, followed by B, G, K, O, R, W, Y, or 8, may be followed by several additional letters and/or numbers.

Pushbuttons Switches, Model(s): Series ADA16 followed by E, followed by 4 or 6, followed by R, followed by 1, 2, D, H, J, or M, followed by 1, 2, or B, may be followed by 5, 6, or 7, followed by A, B, G, H, I, J, K, C, D, L, M, N, P, S, T, U, or X, followed by 1, 3, 4, or 5, followed by 0, A, B, C, D, E, F, G, H, J, K, K1, L, M, N, P, Q, R, S, T or U, followed by R, may be followed by several additional letters and/or numbers

Selector switch, Model(s): C1C followed by 04, 15, 18, 20, 23, 24, followed by T, S, or R, followed by 5, followed by 1 or 2, may be followed by H, J, K, 0, or 1, followed by B, G, K, O, P, R, W, or Y, followed by H, followed by 01, 02, 10, 11, G01, G02, G10, or G11, and maybe followed by additional alphanumeric suffixes

Selector switch, Model(s): F24C maybe followed by A, followed by 1, followed by 04, 15, 18, 20, 23 or 24, followed by 1, followed by 3, 4 G3 or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B or W, followed by F, followed by S, P, A or B, followed by 1, followed by 0, G, R, A, B, W, K or N, followed by 00, maybe followed by additional alphanumeric suffixes.

Selector switch, Model(s): F29C maybe followed by A, followed by 1, followed by 04, 15, 18, 20, 23 or 24, followed by 1, maybe followed by U, followed by 3, 4 G3 or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B or W, followed by F, followed by S, C, T, P, D, 0, 1 or 2, followed by 0, G, R, A, B, W, K or N, followed by 00, maybe followed by additional alphanumeric suffixes.

Selecter switch, Model(s): F34C maybe followed by A, followed by 1, followed by 04, 15, 18, 20, 23 or 24, followed by 1, followed by 3, 4 G3 or G4, followed by 0, 2, 3, 4 or 5, followed by N, G, R, A, B or W, followed by F, followed by S, P, A or B, followed by 1, followed by 0, G, R, A, B, W, K or N, followed by 00, maybe followed by additional alphanumeric suffixes.

Selecter Switches, Model(s): ADA16L followed by 4 or 6 followed by A or M, followed by A, R, or V, followed by 1, 3, 7, or H, may be followed 5, 6, or 7, followed by C, D, L, M, N, P, S, U, or X, followed by A, B, E, H, O, S, T, U, or V, followed by 0 or X, followed by B, G, K, O, R, W, Y, or 8, may be followed by several additional letters and/or numbers.

Stop Switches, Model(s): Series AV2, followed by E, followed by B, followed by V, P, T, TF, TQ or TS, followed by E or U, followed by two or four digit numbers, followed by R, may be followed by G, may be followed by several additional letters and/or numbers.

Stop Switches, Model(s): Series AV2, followed by E, followed by P, T, TF, TO, TS or K, followed by 3, 4 or 6, followed by E or U, followed by two or four digit numbers, followed by R, may be followed by G, may be followed by several additional letters and/or numbers.

Switch Contact Block, Model(s): ADA16 may be followed by 5, 6, or 7, followed by E, Q, or R, may be followed by several additional letters and/or numbers.

Switch Contact Block, Model(s): Series AV2-E10P, AV2-E10G, AV2-E01P and AV2-E01G, may be followed by several additional letters and/or numbers.

Switch Contact block (Empty pole), Model(s): Series AV2-DB, may be followed by several additional letters and/or numbers.

Switch Contact Block Assembly, Model(s): ADA16 may be followed by 5, 6, or 7, followed by A, B, C, D, G, H, I, J, K, L, M, N, P, S, T, U, or E, may be followed by several additional letters and/or numbers.

Last Updated on 2024/12/17 上午 08:47:18

在此資料庫中出現的公司名稱或產品，並不代表其產品本身的製造有經過UL 後續檢驗服務的把關。僅有附 UL 標誌的產品才可被視為取得認證，並涵蓋在UL 後續檢驗服務範疇裡。請務必確認產品上是否有此標誌。

UL 允許複製線上認證目錄中所包含的資料，但必須符合以下條件：1. 指南資訊、零組件、構造、設計、系統和/或認證 (檔案) 必須以完整的方式呈現，且不得誤導、不得操弄這些資料 (或圖繪)。2. 「經 UL 許可自線上認證目錄轉載」的聲明，必須顯示在擷取的資料旁。此外，轉載的資料必須包含以下格式的版權聲明： "©2024 UL LLC."